UNITED STATES MARINE CORPS THE BASIC SCHOOL MARINE CORPS TRAINING COMMAND CAMP BARRETT, VIRGINIA 22134-5019

# COMMUNICATION EQUIPMENT B191716 STUDENT HANDOUT

# **Communication Equipment**

Introduction	In the Marine Corps, the primary purpose of communications is to serve the command. In this communications is the instrument by which comr make their will known and, as such, is the voice of command.	s role, nanders of
Importance	The ability of commanders to pass information ar forces is critical to the outcome of an engagement today's battlefield.	nong their nt on
In This Lesson	This lesson covers the following topics:	
	Торіс	Page
	Tactical Communications	4
	Radio Communications	8
	Radio Communications Equipment	11
	Communications Security	14
	Electronic Warfare	16
	Telephone Equipment	19
	Summary	19
	Annex A: Types of Equipment	20
	Annex B: AN/PRC 119 (RT-1523) Operations	33
	Annex C: AN/PRC-119E/F (RT-1523E/F)	33
	Operations	
	Annex D: AN/PSN-13 (DAGR ) Operations	40
	Annex E: AN/PRC-148 Operations	41
	Annex F: AN/PRC-117F (RT-1796)	43
	Annex G: AN/PRC-150 (RT-1694) Operations	47
	Annex H: AN/PRC-152 (RT-1619) Operations	50
	Annex I: AN/PRC-153 Operations	54
	Annex J: Julian Date Calendar	55
	References	56
	Glossary of Terms and Acronyms	57
	Notes	58
Learning Objectives	<u>Terminal Learning Objectives</u> TBS-COMM-2101Given a radio, perform basic ra	adio
	TBS-COMM-1003 Given SL-3 complete field tele a spool of communications wire, communicate u communications to establish communications be	ephones and sing wired stween sites.

# **Communication Equipment (Continued)**

Learning Objectives (Continued)	Enabling Learning Objectives
	TBS-COMM-1003a Given wired communication assets and SL-3 components, inspect equipment to ensure serviceability.
	TBS-COMM-1003b Given wired communication assets, employ field phones, to establish communications between two stations.
	TBS-COMM-1003c Given an established wired communications system, perform a communications check to conduct an operational check of the system.
	TBS-COMM-1003d Given a non-functioning wired communications system, trouble shoot wired communication devices to establish two-way communications.
	TBS-COMM-2101a Given a radio transmitter, SL-3 components, assemble a radio without omission.
	TBS-COMM-2101b Given a radio transmitter, SL-3 components and a CEOI, program a radio to communicate a message.
	TBS-COMM-2101c Given a radio transmitter, SL-3 components and a CEOI, conduct a communications check to establish radio communications.
	TBS-COMM-2101d Given a radio transmitter, SL-3 components and a CEOI, communicate a message to ensure the message is properly received/understood.
	TBS-COMM-2101e Given a radio transmitter, SL-3 components, troubleshoot a radio to re-establish communications.
	TBS-COMM-2101f Given a radio transmitter, SL-3 components, maintenance requirements, preventive maintenance (PM) equipment, maintain a radio set to support sustained operation.

# **Tactical Communications**

Communications	Communication is a means or method of conveying information from one person or place to another.	
Responsibility	The responsibility for communications lies with the unit commander. The commander is responsible for the effectiveness of the communications systems as well as the tactical and technical aspects of communications.	
Tactical Responsibilities	The course of action the commander selects must be supportable by the communications and information systems means available. The commander must locate the command post where it can best communicate with subordinate units and higher headquarters.	
Technical Responsibilities	The commander ensures that an active communications training program is in effect for all personnel in the command.	
Fundamental Requirements	<ul> <li>All communications systems must satisfy four basic requirements to be effective:</li> <li>Reliability is the assurance that communications will function with desired accuracy and dependability at all times. Thoroughly trained personnel achieve reliability through carefully planned employment of proven communications techniques and equipment.</li> <li>Security is the protection resulting from all measures taken to deny unauthorized persons information of value. This includes preventing the possession and analysis of valuable information or misleading unauthorized persons in their interpretations of such an analysis.</li> <li>Speed denotes timeliness in the flow of information between users of communications and is based upon operational urgency. Always remember MCDP-1's tenet that there must be a trade-off between speed and security. This applies to information flow as well as to maneuver.</li> <li>Flexibility is achieved by designing a communications system that can be adapted to changes in the commander's scheme of maneuver. This is an acknowledgment of the fluid combat environment we expect to encounter.</li> </ul>	

#### **Tactical Communications (Continued)**

Communication Means	The methods used to convey information from one person or place to another are called communications means. Communications means that are employed within the operating forces include
	<ul> <li>Radio.</li> <li>Wire.</li> <li>Sound.</li> <li>Visual.</li> <li>Physical communications</li> </ul>

- Includes messenger (foot or motorized).
   Augmented by mail (guard mail or US mail).
   Data communications, which include all computer and data transmission device.

Security of Communications The following table identifies the type of communication, its level of security, and the pros and cons for using each type.

Type of Communication	Order of Security	Pros	Cons
Messenger	Most Secure	<ul> <li>In a tactical scenario, it is the only applicable physical means of communications.</li> <li>Most secure; nothing is more reliable or secure than a Marine charged with delivering a message.</li> <li>Reliable.</li> <li>Economical.</li> <li>Available to all units.</li> </ul>	<ul> <li>Subject to</li> <li>Enemy actions.</li> <li>Physical limitations on modes of transportation caused by <ul> <li>Weather.</li> <li>Terrain.</li> </ul> </li> </ul>
Wire		<ul> <li>Interconnects closely- located command posts and positions.</li> <li>More secure than radio since the signal is limited to the wire line.</li> <li>Reduced probability of interception.</li> <li>Desirable in defensive operations.</li> </ul>	<ul> <li>Compared to radio, to install and maintain requires more         <ul> <li>Time.</li> <li>Personnel.</li> <li>Equipment.</li> </ul> </li> <li>Not a workable means when unit is mobile.</li> </ul>

# **Tactical Communications (Continued)**

Type of	Order of Security	Pros	Cons
Sound	occurry	<ul> <li>Available to all units.</li> <li>Numerous types <ul> <li>Sirens.</li> <li>Bells.</li> <li>Whistles.</li> </ul> </li> <li>Does not need electricity.</li> <li>Produces no <ul> <li>electromagnetic</li> <li>signature.</li> </ul> </li> </ul>	<ul> <li>Easily misunderstood; simplicity is key to employment.</li> <li>Highly susceptible to interception.</li> <li>Enemy may use same signal for deception.</li> </ul>
Visual		<ul> <li>Available to all units.</li> <li>Numerous types: <ul> <li>Lights.</li> <li>Panels.</li> <li>Hand-and-arm signals</li> <li>Pyrotechnics.</li> </ul> </li> <li>Does not need electricity.</li> <li>Produces no <ul> <li>electromagnetic</li> <li>signature.</li> </ul> </li> </ul>	<ul> <li>Easily misunderstood; simplicity is key to employment.</li> <li>Highly susceptible to interception.</li> <li>Enemy may use same signal for deception.</li> </ul>
Radio	Least Secure	<ul> <li>Fast, flexible, and responsive.</li> <li>Can operate while mobile.</li> <li>Spans great distances.</li> <li>Crucial to high-tempo operations.</li> </ul>	<ul> <li>Least secure means.</li> <li>Highly susceptible to enemy electronic warfare.</li> <li>Subject to interference from         <ul> <li>Atmospheric conditions.</li> <li>Terrain.</li> <li>Manmade sources.</li> </ul> </li> </ul>
Data	Variable Security	<ul> <li>Fast, flexible, and reliable.</li> <li>Secure.</li> <li>Facilitates passing of large amounts of information.</li> <li>Inter-service, Department of Defense (DoD), and civilian connectivity.</li> <li>Can be pushed down to rifle company level.</li> </ul>	<ul> <li>Highly susceptible to environmental effects.</li> <li>Not available to every unit.</li> <li>Requires reliable and sustainable power sources.</li> <li>Requires high degree of MOS expertise to install, operate, and maintain.</li> </ul>

## **Radio Communications**

Radio Wave Fundamentals	Radio communication uses energy in the form of electromagnetic waves that propagate through space at the speed of light. Since the mechanics of wave motion are much the same for all types of waves, the nature of radio wave motion and propagation can be understood by comparing it with surface waves on water.
	Almost everyone has thrown a stone into a pond and watched waves from the splash spread out over the surface of the water in ever increasing concentric circles. If the pond is large enough, the waves can be seen to grow weaker as they move away from the point of origin until they disappear.
	Radio waves behave in a similar manner, except they expand in three-dimensional space. Radio waves travel along the surface of the earth (ground waves) and up into the atmosphere (sky waves).
Frequency and Wavelength	Wavelength is directly related to frequency. Frequency is measured in terms of the number of waves generated (cycles) per second. One cycle per second is one hertz. At the infantry battalion level, the radios operate on frequencies in the megahertz (MHz) (millions of cycles per second) range.
	To understand the relative wavelength of different frequencies, we can use a sine wave (see following diagram). The wavelength of the signal at 2 MHz is five times longer than the wavelength of the signal at 10 MHz.



#### **Radio Communications (Continued)**

**Frequency and Wavelength (Continued)** The length of the radio wave affects the wave's propagation path. The longer wavelength (lower frequency) allows the wave to bend around and over larger obstacles, such as hills or buildings. As the wavelength shortens (increase in frequency), the waves ability to bend around obstacles decreases.

To illustrate, imagine making a 90-degree turn in a car while driving at a speed of 5 miles per hour (MPH). Now, imagine attempting the same turn at 55 MPH. The lower speed allows you to turn at a greater angle. The same holds true for lower frequencies.

**Ground Waves** 

Ground waves travel from the transmitting antenna along the surface of the earth (see following diagram).



When planning for an operation, you must understand how the environment you are operating in will affect your communications (see following diagram).



# **Radio Communications (Continued)**

Ground Waves (Continued)	Several factors can affect the distance/range these waves travel
	<ul> <li>Dense vegetation, mountainous terrain, or dry desert soil can negatively affect a ground wave.</li> <li>Manmade features, such as buildings, power lines, or water towers, can reflect a radio wave into a new direction or absorb the signal.</li> <li>Severe weather, such as sandstorms, thunderstorms, and blizzards, can affect your radio signal.</li> </ul>
	Planning considerations for ground waves are to
	<ul> <li>Position your antenna on the military crest.</li> <li>Position your antenna as far back as possible from obstacles in the direction you want to communicate.</li> <li>Plan for and be prepared to use relay/retransmission stations.</li> <li>Select a scheme of maneuver that allows you to avoid or exploit certain obstacles.</li> </ul>
	NOTE: Remember, the enemy will be attempting to listen to your radio transmissions. If you can position your antenna so a natural or manmade obstacle is between you and the enemy, you can reduce his ability to intercept your transmissions.
Sky waves	As mentioned earlier, radio waves travel up into the atmosphere (sky waves). Because lower frequencies have longer wavelengths, when they travel into the upper regions of the atmosphere, they can be reflected (or bounced) back down to the earth's surface. Also, the wave can reflect off the earth's surface. We use this property of "bouncing" the radio signal off the ionosphere and the earth's surface to increase the range of our communications. In fact, the wave can continue this cycle of bouncing back and forth between the ionosphere and the earth's surface all the way around the earth.
	Remember, however, this property is restricted to frequencies from approximately 2 to 12 MHz. Frequencies above this range tend to "punch" through the ionosphere and continue out into space.

#### **Radio Communications (Continued)**

**Sky waves (Continued)** One problem with sky waves is they produce "skip zones" (areas where the signal does not return to earth) on the earth's surface. To alleviate this problem, we use a near vertical incident sky wave (NVIS). NVIS directs the radio wave at a higher angle toward the sky, thus ensuring the reflected wave returns to earth closer to the transmitter and eliminating any skip zones. Because NVIS travels at high angles, we can use it to communicate over high obstacles, such as mountains. NVIS communications can travel up to 300 miles from the transmitting radio.

#### **Radio Communications Equipment**

Infantry battalion radio communications equipment transmits over three frequency spectrums: HF/VHF/UHF

- High frequency (HF): 2 to 29.999 MHz
- Very high frequency Low band (VHF Low): 30 to 89.999 MHz
- Very high frequency High band (VHF High): 90 to 224.999 MHz
- Ultra high frequency LOS/SATCOM (UHF): 225 to 511.999 MHz

The following table describes these three frequencies, by pros and cons, use, and types of equipment. The types of equipment are described further in Appendix A.

Frequency	Pros and Cons	Use	Equipment
HF	Lower HF frequencies can communicate over great distances.	When long haul communications are necessary and no SATCOM is available.	<ul> <li>AN/PRC-150 man portable radio.</li> <li>AN/MRC-148 vehicle mounted radio.</li> </ul>
VHF	<ul> <li>Extends slightly beyond line of sight (LOS) due to diffraction or bending of the signal by the atmosphere.</li> <li>At frequencies in the 30 MHz range, acts like HF ground waves.</li> <li>Range of reliable communications generally no more than 40 km and often depends on the</li> <li>Power output of the radio.</li> <li>Terrain.</li> <li>Atmospheric conditions.</li> </ul>	Most widely used in infantry battalions.	<ul> <li>Models built around the Single Channel Ground and Air Radio System (SINCGARS) radio:</li> <li>AN/PRC-119: man-packed SINCGARS radio with frequency-hopping capability and internal cryptographic chip.</li> <li>AN/VRC-88: vehicular-mounted, low power (same as PRC-119) SINCGARS radio.</li> <li>AN/VRC-89: vehicular-mounted, dual SINCGARS radio with one low power radio and one with power amplifier.</li> </ul>

Frequency	Pros and Cons	Use	Equipment
VHF (continued)	Pros and Cons	Use	<ul> <li>Equipment</li> <li>Models built around the Single Channel Ground and Air Radio System (SINCGARS) radio: (Continued)</li> <li>AN/VRC-90: vehicular- mounted, single SINCGARS with power amplifier.</li> <li>AN/VRC-91: vehicular- mounted, dual SINCGARS radio with one low power radio and one with power amplifier.</li> <li>AN/VRC-92: vehicular-</li> </ul>
			<ul> <li>mounted, dual SINCGARS radio with two power amplifiers.</li> <li>AN/MRC-145: vehicular- mounted SINCGARS with power amplifier (two radios per vehicle). This system is intended to be used for retransmission; however, many commanders use it for command and control.</li> </ul>
UHF (LOS)	<ul> <li>Strictly line of sight (LOS).</li> <li>Unable to bend around obstacles because UHF wavelengths are so small.</li> <li>Range may extend for more than 500 km as long as aircraft is high enough to be within LOS.</li> </ul>	<ul> <li>Ground-to-air communications</li> <li>Air-to-air communications</li> </ul>	<ul> <li>AN/PRC-117/152/148, man- portable.</li> <li>AN/VRC-103, vehicular- mounted.</li> </ul>
UHF (SATCOM)	<ul> <li>Extends from the earth to Satellites and back down</li> <li>Used for both high speed voice and data communications.</li> </ul>	<ul> <li>Provides long range tactical communications</li> <li>Can access 5k or 25k channels DAMA or dedicated.</li> </ul>	<ul> <li>AN/PRC-117/152/148 man- portable, AN/VRC-103/110: vehicular-mounted radio system with power amplifier</li> <li>AN/PRC-148 can only be used for SATCOM voice.</li> </ul>

#### **Radio Communications Equipment (Continued)**

#### SINCGARS

The primary MAGTF VHF radio is the Single Channel Ground Air Radio System (SINCGARS). SINCGARS is a family of lightweight combat radios that serves as the primary means of communications for command, control, and fire support on the battlefield. The system provides high security against enemy electronic warfare by using frequency-hopping capability with integrated communications security (COMSEC). Since SINCGARS is the primary means of communicating in the Marine Corps and can be operated in different modes, SINCGARS radios and frequency hopping will be described in depth here.

# Radio Communications Equipment (Continued)

Frequency Hopping	Frequency hopping is a transmission technique that changes the frequency of a radio channel automatically at a pseudo-random rate common to both to the transmitter and receiver.
	The number of frequencies SINCGARS will hop through varies depending on the hopset. The more frequencies in the hopset, the more resistant to electronic warfare the network will be. SINCGARS will change frequencies 100 cycles a second.
	The five variables required to frequency hop are
	<ul> <li>Hopset: The VHF frequencies that SINCGARS will hop through in frequency hopping mode.</li> <li>Transmission security key (TSK): The sequence in which the radio will hop within a HOPSET. It does not encrypt the signal or transmission.</li> <li>Transmission encryption key (TEK): Encrypts and decrypts the operator's voice during the radio transmission.</li> <li>Time: Both Julian date and Greenwich Mean Time (GMT) must be entered. GMT is also known as "Zulu time." SINCGARS radios timing can tolerate <u>+/-4</u> seconds between radios and remain in sync with each other.</li> </ul>
	<ul> <li>Net identifier (Net ID): Three-digit numeric code that determines where a specific frequency-hopping (FH) circuit begins frequency-hopping. The radio operator enters it, and it will correspond to a specific frequency within the hop set.</li> </ul>

F Radio	The following table describes SINCGARS VHF radio sets.
---------	--

SINCGARS	VHF
Sets	

SINCGARS VHF Radio Sets	Description
AN/VRC-88	10-km range due to lack of power amplifier.
	May be operated while
	<ul> <li>Mounted in a vehicle.</li> </ul>
	<ul> <li>In a dismounted (man-pack) configuration.</li> </ul>
AN/PRC-119C-F, AN/PRC 117F, AN/PRC 152, AN/PRC 148	Man-packed SINCGARS (single/multi channel radios)
	200m to 400m in lower power setting.
	400m to 5km in medium power.
	• 5km to 10km in high power (for PRC 152 and 148 max range of 5km-7km unless amplified in a vehicular configuration).
AN/VRC-90	• Long-range, vehicle-mounted radio set with one power amplifier.
	Used where the communications range must normally operate over long distances (up to 40 km).

#### **Radio Communication Equipment (Continued)**

SINCGARS VHF Vehicular Radio Sets	Description
AN/VRC-91	Vehicle-mounted, dual configuration set.
	• Consists of two AN/PRC 119 radios along with one power amplifier.
	<ul> <li>Short-range radio, which can be man-packed configured.</li> <li>Long-range radio.</li> </ul>
	<ul> <li>Provides long-range (up to 40 km) and short-range (up to 10 km) operations in two nets, simultaneously</li> </ul>
	<ul> <li>Combines the features of a VRC-88 and VRC-90 into a single vehicle installation.</li> </ul>
AN/VRC-92	Vehicle-mounted, dual configuration set.
	Consists of two long-range radios.
	<ul> <li>Used to meet dual, long-range (up to 40 km) communications requirements.</li> </ul>
	<ul> <li>Is a VRC-89 with an additional power amplifier mount to provide communications range up to 40 km to the second radio system.</li> </ul>
	• Common in highly mobile units like the artillery battalion, light armored reconnaissance battalion, assault amphibian battalion, and tank battalion.
AN/MRC-145	Vehicle with mounted, dual configuration set.
	Consists of two long-range radios.
	Used for VHF retransmission and command and control.
AN/VRC-110	<ul> <li>Vehicle-mounted, dual configuration set offering two power amplifiers for each radio.</li> </ul>
	<ul> <li>Consists of two handheld AN/PRC 152's mounted (radios can be removed from mount and utilized for inter-team communications).</li> </ul>
	<ul> <li>Used for VHF, UHF and UHF SATCOM long range voice and data communications.</li> </ul>
	<ul> <li>This vehicle configuration is currently being fielded to the fleet Marine force to replace the VRC 88-92 systems along with the MRC 145 configuration.</li> </ul>

#### **Communications Security**

COMSEC is the protection resulting from all measures designed to deny unauthorized persons information of value that might be derived from the possession and study of telecommunications or to mislead unauthorized persons in their interpretation of the results of such possession and study. COMSEC is divided into four areas:

- Crypto security.
- Emission security.
- Physical security.
- Transmission security.

#### Crypto security

Crypto security is the component of COMSEC that results from the provisions of technically sound crypto-systems and their proper use. Marine Corps doctrine states that all communications circuits will be secured with cryptographic systems to the fullest extent possible.

# **Communications Security (Continued)**

Emission Security	Emission security is the component of COMSEC which results from all measures taken to deny unauthorized persons information of value that might be derived from intercept and analysis of compromising emanations from crypto-equipment and telecommunications systems. The most widely known form of emission security is emissions control (EMCON).
	EMCON involves the reduction or elimination of emissions (e.g., radio signals, radar signals, etc.). Commanders will set EMCON to reduce their unit's electromagnetic signature to deny the enemy electronic warfare (EW) units the ability to gain our communications order of battle (COB) and electronic order of battle (EOB).
	Refrain from inadvertently divulging plans for an upcoming attack. Many units increase their radio transmissions shortly before commencing an attack. Even if we use crypto-systems properly, and the enemy cannot decipher what we are saying, the enemy may deduce that we are about to attack simply by studying the amount of traffic we are generating. To alleviate this potential problem, commanders may direct the unit to go to EMCON to deny the enemy this information.
Physical Security	Physical security is the component of COMSEC that results from all physical measures taken to safeguard classified equipment, material, and documents from access or observation by unauthorized persons.
Transmissions Security	Transmissions security is the component of COMSEC that results from all measures designated to protect transmissions from interception and exploitation by means other than cryptanalysis.
Cryptography	Every tactical radio net in the United States Marine Corps is encrypted. To accomplish this, certain encryption devices must be used. Cryptographic equipment will secure or encode all information passed over that radio. A radio that has the capability to encrypt and decrypt transmissions without the aid of an external device is said to have "internal COMSEC." As well, when that radio is loaded with cryptographic material, it will have its "fill."

#### **Communications Security (Continued)**

Cryptography (continued)	<ul> <li>Examples of DoD radios that have internal COMSEC are:</li> <li>AN/PRC 152 (TYPE I Encryption)</li> <li>AN/PRC-150 (TYPE I Encryption)</li> <li>AN/PRC-148 (TYPE I Encryption)</li> <li>AN/PRC-119 C, D, E, F (TYPE I Encryption)</li> <li>AN/PRC 117F (TYPE I Encryption)</li> <li>AN/PRC 153 (TYPE II Encryption)</li> </ul>
Reaction to Violation of Transmission Security	Essential elements of friendly information (EEFIs) are specific items of information that, if disclosed, could have a negative impact on friendly operations. Reacting to transmission of EEFI is specifically enforced when transmitting over an unencrypted or "open" net. The EEFI list includes
	<ul> <li>Position.</li> <li>Capabilities.</li> <li>Operations.</li> <li>Friendly electronic warfare.</li> <li>Personnel.</li> <li>COMSEC.</li> <li>Wrong circuit.</li> </ul>
	<i>BEADWINDOW</i> is a procedural word that brings to the immediate attention of circuit operators the fact that an

#### **Electronic Warfare**

Electronic warfare (EW) is a broad term covering any military action involving the use of electromagnetic or directed energy either to attack an enemy's combat capability or to protect friendly combat capabilities against undesirable effects of friendly or enemy use of the electromagnetic spectrum. Electronic warfare entails the surveillance of the electromagnetic spectrum for immediate threat recognition in support of electronic warfare operations and other tactical actions such as threat avoidance, targeting, and homing.

EEFI disclosure has occurred.

## Preventive Measures

As stated previously, electronic protection are those measures taken which allow for the continued use of the electromagnetic spectrum, despite enemy efforts to reduce or eliminate our use of that medium. Electronic protection can be either preventive or remedial in nature.

# Electronic Warfare (Continued)

Preventive Measures (Continued)	Preventive measures are simply techniques for avoiding exploitation by the enemy. Avoiding enemy jamming is primarily a matter of avoiding detection; avoiding enemy deception efforts requires operators to ensure those signals that might be intercepted by the enemy contain as little usable information as possible. Some prevention techniques
	<ul> <li>Reduce electronic tranc to a minimum (communication by exception) through clearly communicated, good tactical plans that include mission orders, commander's intent, and a focus of effort.</li> <li>Well-developed and exercised standard operating procedures (SOPs) to include brevity codes, communication by exception, low power electronic-equipment usage, directional antennas, etc.</li> <li>Thorough training in the installation and operation of equipment, including proper antenna sitting (to allow for terrain masking of electronic signatures), directional antennas, etc.</li> <li>The use of alternate means of communication when possible (e.g., messengers, wire, visual, etc.).</li> <li>The use of alternate means of communication when possible (e.g., messengers, wire, visual, etc.).</li> <li>Use approved operation codes, i.e. not locally developed ones that are <i>very simple</i> to break.</li> <li>If possible, select a scheme of maneuver that will minimize friendly electronic emissions. For example, have a simple scheme of maneuver that can be executed with few or no emissions, by imposing radio silence, or by selecting avenues of approach that will interpose terrain between friendly transmitters and enemy intercept stations.</li> </ul>
Reaction to Suspected Enemy Electronic Warfare	When the station begins to suffer interference, the operator's immediate action is to attempt to determine the cause of the problem. Since the symptoms of jamming are the same as many other types of electronic interference, the operator should not immediately assume he is the target of hostile EW activity.

# Electronic Warfare (EW) (Continued)

Reaction to Suspected Enemy Electronic Warfare (continued)	The first action the operator should take is to remove the set's antenna. If the problem continues at its original volume and intensity with the antenna removed, the operator may assume that the problem is with the equipment and not EW. The critical element for helping the operator determine if interference is EW in nature or simply a problem with the set <i>is the operator's level of training</i> .
	Additional remedial measures:
	<ul> <li>Do not announce or indicate that you believe you are being jammed.</li> <li>Keep operating but speak slowly and authenticate all stations.</li> <li>Change antenna sitting and orientation. Relocate antenna so that a building or hill is between the antenna and the source of the jamming, if known. Switch to a directional antenna.</li> <li>Increase transmitter power (equipment dependent).</li> <li>Send high precedence traffic by another net, if possible, but continue operating on the jammed net.</li> <li>Log the jamming and report immediately to your supervisor. Send MIJI (Meaconing, Intrusion, Jamming, and Interference) report in accordance with unit SOP ASAP.</li> </ul>
Meaconing, Intrusion, Jamming, and Interference (MIJI) Report	<ul> <li>The format for the MIJI report is as follows (use the acronym TUFT):</li> <li>Time of interference.</li> <li>Unit affected.</li> <li>Frequency or frequencies affected.</li> <li>Type of interference (jamming, imitative deception, etc.).</li> </ul>
	Use alternative frequency as a <i>last</i> resort. Send instructions to shift frequency by another secure net, if possible. Use a prearranged alternate frequency if you

have no other contact with the distant station.

#### **Electronic Warfare (Continued)**

Reaction to Imitative Deception (GINGERBREAD)	If the enemy is suspected of using imitative electromagnetic deception (i.e. the enemy is posing as a friendly unit) on the net, <i>GINGERBREAD</i> is a procedural word used to alert other stations on a radio net. An example of how this would sound is
	"All stations this net (or use the net call sign), GINGERBREAD(insert the suspected enemy's call sign), over."
	The other stations on the net may or may not respond to your transmission. After you have alerted everyone on the net, send a MIJI report via another secure net, if possible.

#### **Telephone Equipment**

Annex A contains pictures and descriptions of the devices and other equipment to which you will be exposed at TBS. The two manual telephones used at the infantry company level and below are

- TA-1: A rugged voice-powered telephone that, when used in conjunction with standard communications wire, has a range of 4 miles.
- TA-312: A rugged battery-powered telephone that has a range of 14 to 22 miles and is fully compatible with the TA-1.

#### Summary

Every commander is responsible for communications within his or her unit. To be successful, a working knowledge of Marine Corps communications doctrine and equipment is vital. *If you can't communicate, you can't command!* 

#### Annex A: Types of Equipment

- Transmission Range: HF Indefinite (power output, atmospheric conditions, and antenna configuration dependant), VHF 0-10 miles.
- Frequency Range: (HF, partial low band VHF) 1.6 59.999 MHz
- Up to 200 preset channels
- 75 fully programmable system presets
- Capable of frequency hopping
- · Capable of both voice and data communications
- Capable of fixed frequency HF communications partial low band VHF fixed frequency communications
- Capable of both ALE and 3G network programming
- Power Sources: BA-5590 (Lithium) 2 each, weight- 1.45 lbs.
- Power Output: 1, 5, 20 watts (mode dependent).
- Weight: 9.9 lbs. without batteries, 11.35 lbs with batteries.
- Crypto Unit: Internal COMSEC (Type I)



- AN/PRC-119 Radio Set Technical Characteristics
  - Transmission Range
    - o 0m-400m low power
    - o 400m–5km medium power
    - o 5km-10km high power
    - o 10km-40km power amplifier
  - Weight: 15.5 lbs without batteries, 16.95 lbs with batteries.
  - Crypto Unit: Internal COMSEC (Type I)
  - Capable of SINCGARS frequency hopping on 2320 available channels at 100 channels per second
  - Capable of both voice and data communications
  - Frequency Range: (VHF) 30-87.975 MHz
  - Present Channels:
    - 6 single channel or FH Net ID
    - 1 manual/1 CUE for single channel
    - Power Source: BA-5590 one each, weight 1.45 lbs
  - Power Output: 0.5, 1.5, 5, 10 watts (50 watts utilizing a power amplifier)



AN/PRC-119E/F Radio Set

- Transmission Range
  - 0m–400m low power
  - 400m–5km medium power
  - o 5km–10km high power
  - o 10km-40km power amplifier
- Weight: 8.1 lbs without batteries, 9.5 lbs with batteries
- Crypto Unit: Internal COMSEC (Type I)
- Capable of SINCGARS frequency hopping at 2320 available channels at 100 channels per second
- Capable of both voice and data communications
- Frequency Range: (VHF) 30-87.975 MHz
- Present Channels:
  - o 6 single channel or FH Net ID
  - 1 manual/1 CUE for single channel.
  - Power Source: BA-5590 one each, weight 1.45 lbs
- Power Output: 0.5, 1.5, 5, 10 watts (50 watts utilizing a power amplifier)



AN/PRC-117F Radio Set Technical Characteristics

- Transmission Range:
  - $\circ$  VHF 0 to 10 miles
  - UHF LOS (Line of Sight) dependant
  - UHF SATCOM- 22,300 miles, (Network and channel access dependent)
- Frequency Range: (VHF, ,UHF, UHF SATCOM) 30 511.999 MHz
- o 100 programmable system presets
- 10 programmable DAMA (Demand Assigned Multiple Access) channels
- Can operate on dedicated SATCOM channels
- Capable of SINCGARS frequency hopping at 2320 available channels at 100 channels per second
- Capable of both voice and data communications
- Power Source: BA-5590 (LITHIUM) two each, weight-1.45lbs
- Power Output: 1, 5, 10 Watts (VHF, UHF), 20 Watts (UHF SATCOM)
- Weight: 13.8 lbs without batteries, 16.7 lbs. with batteries
- Crypto Unit: Internal COMSEC (Type I)



#### AN/PRC-148 Radio Set



- Transmission Range:
  - $\circ$  VHF- 0 to 5 miles.
  - UHF LOS (Line of Sight) dependent
  - UHF SATCOM 22,300 miles dependant on atmospheric conditions (voice only)
- Frequency Range: (VH,F, UHF, UHF SATCOM) 30 – 511.999 MHz
- 10 programmable groups, 16 channels per group
- Capable of SINCGARS frequency hopping at 2320 available channels at 100 channels per second
- Maritime version (V1) is submersible up to 66 feet.
   Urban version (V2) is submersible up to 6 feet
- Power Source: BA-5123 (3 VDC)
- Power Output: 0.1, 0.5, 1, 3 or 5 Watts
- Weight: 2-4 lbs, (Battery type and accessory Dependent)
- Crypto Unit: Internal COMSEC (Type I)



#### AN/PRC-152 Radio Set



- 2 versions (V1), all features except external GPS (USMC version) and (V2) all features including external GPS
- Transmission Range:
  - $\circ~$  VHF- 0 to 5 miles.
  - UHF LOS (Line of Sight) dependent
  - UHF SATCOM 22,300 miles dependant on atmospheric conditions
- Frequency Range: (VHF, UHF, UHF SATCOM) 30-511.999 MHz
- o 99 programmable system presets
- Can operate on both DAMA (Demand Assigned Multiple Access) and dedicated SATCOM channels
- Capable of both voice and data communications
- Capable of SINCGARS frequency hopping at 2320 available channels at 100 channels per second
- Submersible up to 2 meters standard (20 meter submersible option used by Special Operations units)
- Power Source: Rechargeable Lithium-Ion (Li-ION) Battery
- Power Output: 0.25, 2, 5 watts (50 watts utilizing a power amplifier)
- $\circ~$  Weight: 2.6 lbs. (with battery)
- Crypto Unit: Internal COMSEC (Type I)



#### AN/PSN-13 (DAGR)



- Signal acquisition using up to 12 channels
- All satellites in view are tracked using 11 channels
- Navigation using up to 10 channels
- L1: Coarse/Acquisition (C/A), Precise (P), and Encrypted P (Y) code capability
- L2: Precise (P), and Encrypted P (Y) code capability
- Accepts differential GPS signals
- One handed operation
- Backlit display and keypad for night operation
- Operates in all weather, day or night
- o Produces no signals that can reveal your position
- o Automatically tests itself during power up
- Can operate on +9 to +32 volts direct current (V DC) external power
- Can perform area navigation functions, storing up to 999 waypoints
- Stores up to 15 routes with up to 1000 legs for each route
- o Resists jamming
- o Resists spoofing when crypto keys are installed
- Sealed against dust and water to a depth of 1 meter (3 feet) for 20 minutes
- $\circ$   $\;$  Interconnects with other electronic systems  $\;$
- Uses quick disconnect connectors and fasteners to allow easy unit replacement
- Compatible with night vision goggles (NVG) and does not cause blooming
- Uses internal compass to compute track and ground speed when moving at or below 0.5 meters per second.

#### AN/PRC-153 Radio Set



- Transmission Range: 0-5 miles flat terrain, 1 mile with obstacles
- 15 Zones 16 channels per zone, 240 channels total
- o Omni Directional
- Frequency Range: (UHF) 380-470 MHz
- Power Source: Nickel Cadmium, Nickel Metal Hydride
- Power Output: 2.5 5 watts
- o Operational mode: Voice
- Encryption: AES 256 bit
- Crypto Unit: Internal COMSEC (Type II)
- o Radio Variations: (V) 1, 2, 3
- $\circ$  Submersible up to 3 meters for 30 minutes
- $\circ~$  Weight: 19.85 oz with NiCD battery





#### TA-1/PT

- Range: 4 miles using WD-1 (slash wire).
- Power: Sound.
- Signal: Visual and audible ringer.
- Weight: 4 lbs.
- Mode of Operation: The TA-1 will operate with other TA-1s, TA-312s and through the SB-22 switch-board.



#### TA-312/PT Technical Characteristics

- Range: Maximum of 14 to 22 miles based on temperature and relative humidity.
- Power: BA-3030s (D Cell batteries) two each.
- Signal: Audible Ringer.
- Weight: 10 lbs.
- Mode of Operation: The TA-312 will operate with other TA-312s, TA-1s and through the SB-22 switch-board.



- OE-254 Antenna **Technical Characteristics** 
  - Frequency Range: (VHF) 30 87.975 MHz •
  - Operating Range: Maximum of 15 miles using non-power amplified VHF communications
    Erection Time: 15 minutes for two Marines
  - Height: 39 ft
  - Weight: 42 lbs •



#### COM-201B Antenna

- Frequency Range: (VHF) 30 87.975 MHz
- Operating Range: Maximum of 15 miles using Non- power amplified VHF communications
- Erection time: 15 minutes for two Marines utilizing OE 254 mast sections, 2 minutes without
- May be elevated using OE-254 mast sections if LOS communications is limited utilizing the antennas 3 extendable legs
- Height: 105 inches
- Weight: 10Lbs

# Annex B: SINCGARS (RT-1523) Operations

	Loadin	ng a Single Channel Frequency into an RT-1523	
STEP	ACTIO	N	
1	Set "FC	CTN" to LD.	
2	Set "MODE" to SC.		
3	Set "Cl	HAN" to desired channel.	
4	Set "Co	OMSEC" to PT.	
5	Press "	'FREQ"; 00000 will be displayed or current frequency.	
6	Press "	'CLR"; lines will replace zeroes.	
7	Enter d	lesired frequency.	
8	Press "	'STO."	
9	Repeat	t as required.	
10	Set "FC	CTN" to normal operating position (SQ ON/OFF).	
	Clearin	ng a Single Channel Frequency from an RT-1523	
STEP	ACTIO	N	
1	Set "FC	CTN" to LD.	
2	Set "M	Set "MODE" to SC.	
3	Set "Cl	Set "CHAN" to desired channel.	
4	Press "	Press "FREQ."	
5	Press "CLR."		
6	Press "	Press "LOAD/0."	
7	Press "	'STO."	
8	Set "FC	CTN" to normal operating position (SQ ON/OFF).	
	Loading COMSEC in the RT-1523 Using the DTD		
STEP	ACTION		
1	Prep th	he Radio	
	Step	Action	
	1	Set "FCTN" to LD.	
	2	"MODE" selection does not matter at this time.	
	3	"CHAN" selection does not matter at this time.	
	4	Set "COMSEC" to CT.	
	5	Press PTT (twice) to clear alarm.	
2	Load COMSEC		
	Step	Action	
	1	Turn "DTD" on.	
	2	Select "RADIO" and press enter.	
	3	Select "COMSEC" and press enter.	
	4	Select "LD" and press enter.	

# Annex B: SINCGARS (RT-1523) Operations (continued)

2 (cont)	Load C	OMSEC (continued)		
	Step	Action		
	5	Select "TEK" and press enter.		
	6	Select desired segment by paging up or down and press enter at		
		desired segment.		
	7	"XMIT" will show on the screen to the right of the segment.		
	8	Arrow over to "QUIT" and press enter.		
	9	Connect DTD to RT-1523 and arrow down.		
	10	DTD will display "SENDING TEK."		
	11	DTD will display "PRESS LOAD ON RT."		
	12	Once you've pressed load on the keypad, you'll hear a beep and		
		see "H TEK" in the RT LED. At this moment, you have to STO the		
		fill in a desired channel.		
	13	DTD will show 1 KEY TRANSFERRED. RT will show DONE.		
	14	Repeat steps as required.		
	Loadin	g FH data in the RT-1523 via the DTD		
STEP	ACTION			
1	Prep th	p the Radio		
	Step	Action		
	1	Set "FCTN" to LD.		
	2	Set "MODE" to FH.		
	3	"CHAN" selection does not matter at this time.		
	4	Set "COMSEC" to CT.		
	5	Press PTT (twice) to clear alarm.		
2	Load F	H data		
	Step	Action		
	1	Turn "DTD" on.		
	2	Select "RADIO" and press enter.		
	3	Select "SEND" and press enter.		
	4	Select "RADIO" and press enter.		
	5	Select "ICOM" and press enter.		
	6	Connect DTD to RT-1523 "AUDIO/FILL" connector.		
	7	Arrow down twice.		
	8	Do not include time. Select "NO" and press enter.		
	9	Press "LOAD" on RT.		
	10	"LOAD" will appear in LED and a series of beeps will be heard in		
		the handset.		
	11	Observe the "FH DATA" being loaded.		
	12	Once all data has been transferred, DTD will read "ICOM		
		TRANSFER SUCCESSFUL" and RT LED will display "DONE."		

# Annex B: SINCGARS (RT-1523) Operations (continued)

2 (cont)	Load FH data (continued)		
	Step	Action	
	13	Arrow down as indicated and turn DTD off.	
	14	Set "FCTN" to SQ ON/SQ OFF as desired.	
	15	Set "CHAN" to desired channel and load time.	
	Manua	Ily Loading Time in the RT-1523	
STEP	ACTIO	Ν	
1	Set "FC	CTN" to LD.	
2	Set "M	ODE" to FH. NOTE: Channel selection doesn't matter because the	
	time yo	u load will automatically go to all channels.	
3	Press "	TIME" on the keypad; 00 will appear on the left side of the LED	
4	Press "	CLR" on the keypad; two lines will replace the 00.	
5	Enter th	ne last two digits of the Julian date and press "STO" on the keypad.	
6	Press time again and 00 00 will appear.		
7	Press "	CLR" and the 00 00 will be replaced by four lines.	
8	Enter "ZULU/GMT" time and press "STO"; if 30 seconds have elapsed		
	between any of these steps, the RT will time out and you will have to start		
	over at	Step 3.	
9	Set "FC	CTN" to SQ ON/SQ OFF as desired and attempt to communicate.	
	Loading Time in the RT-1523 with the PSN-13 (DAGR)		
STEP	ACTION		
1	Prep the radio		
	Step	Action	
	1	Set "FCTN" to LD.	
	2	"CHAN," "MODE," and "COMSEC" selection does not apply.	
2	On the	DAGR	
	Step	Action	
	1	Turn the PSN-13 on	
	2	Navigate to the PPS/HQ/SINCGARS page	
	3	Press ENTER and navigate to the desired fields	
	4	Press ENTER again on the desired field and ensure COM1/2 is	
		displayed in the appropriate boxes	
	5	Connect the PSN-13 to the radio's fill port	
	6	Press the menu button and a box will appear that says	
		"ACTIVATE SINCGARS"	
	7	Press the enter key and follow the directions	

# Annex B: SINCGARS (RT-1523) Operations (continued)

	Changing the NET ID
STEP	ACTION
1	Set "FCTN" to LD.
2	Set "MODE" to FH(M).
3	Set "CHAN" to the channel that contains the Net ID being changed.
4	Press "FREQ" then "CLR" on the keypad. F will show in RT LED.
5	At this time, press any 3 numbers that you want to be the new Net ID.
6	Press "STO" and the new Net ID should appear in the LED.
	Basic Trouble Shooting for the RT-1523
STEP	ACTION
1	Is it on?
2	Is the volume up and is the display turned up?
3	Right Net ID or frequency?
4	Right crypto? (Are all channels loaded with the same crypto? If not, try
	scrolling COMSEC.)
5	Do you have the right time loaded?
6	Check connectors (handset and antenna, pm).
7	Check batteries (main battery and fill battery).
8	If all of the above is good and you cannot seem to talk, go to STBY then back to ON.

# Annex C: PRC-119F (RT1523E/F) OPERATIONS

	Loadir	ng a Single Channel Frequency into an RT-1523E/F
STEP	ACTIO	Ν
1	Set the	e function switch to load.
2	Press t	he MENU key until SC, FH, or FHM appears Set to SC by pressing
	the #7	CHG button
3	Press t	the MENU button again until the channel is displayed. Press1-6 to set
	desired	d channel.
4	Press t	the MENU button again until CT or PT is displayed. Press the #7 CHG
	button	until PT is displayed.
5	Press '	'FREQ"; 00000 will be displayed or current frequency.
6	Press '	CLR"; lines will replace zeroes.
7	Enter c	lesired frequency.
8	Press '	'STO."
9	Repea	t as required.
10	Set "FO	CTN" to normal operating position (SQ ON/OFF).
_	Clearin	ng a Single Channel Frequency from an RT-1523E/F
STEP	ACTIO	N
1	Set "FO	CTN" to LD.
2	Press t	the MENU key until SC, FH, or FHM appears Set to SC by pressing
	the #7	CHG button
3	Press t	he MENU button again until the channel is displayed. Press1-6 to set
_	desired	d channel.
4	Press '	'FREQ."
5	Press '	'CLR."
6	Press '	'LOAD/0."
7	Press '	'STO."
8	Set "FO	CTN" to normal operating position (SQ ON/OFF).
	Loadir	ng COMSEC in the RT-1523 Using the DTD
STEP	ACTIO	Ν
1	Prep t	he Radio
	Step	Action
	1	Set "FCTN" to LD.
	2	Press the MENU key until SC, FH, or FHM appears Set to FH by
		pressing the #7 CHG button
	3	"CHAN" selection does not matter at this time.
	4	Press the MENU button again until CT or PT is displayed. Press the
		#7 CHG button until CT is displayed.
	5	Press PTT (twice) to clear alarm.
2	Loadi	ng COMSEC with AN/CYZ-10
	Step	Action
	1	Turn "DTD" on.
	2	Select "RADIO" and press enter.
	3	Select "COMSEC" and press enter.
	4	Select "LD" and press enter.

# Annex C: SINCGARS (RT-1523E/F) Operations (continued)

2 (cont)	Load C	OMSEC (continued)
	Step	Action
	5	Select "TEK" and press enter.
	6	Select desired segment by paging up or down and press enter at
		desired segment.
	7	"XMIT" will show on the screen to the right of the segment.
	8	Arrow over to "QUIT" and press enter.
	9	Connect DTD to RT-1523E/F and arrow down.
	10	DTD will display "SENDING TEK."
	11	DTD will display "PRESS LOAD ON RT."
	12	Once you've pressed load on the keypad, you'll hear a beep and see
		"H TEK" in the RT LED. At this moment, you have to STO the fill in a
		desired channel.
	13	DTD will show 1 KEY TRANSFERRED. RT will show DONE.
	14	Repeat steps as required.
	Loadin	g FH data in the RT-1523 via the DTD
STEP	ACTIO	N
1	Prep th	e Radio
	Step	Action
	1	Set "FCTN" to LD.
	2	Set "MODE" to FH.
	3	"CHAN" selection does not matter at this time.
	4	Set "COMSEC" to CT.
	5	Press PTT (twice) to clear alarm.
2	Load F	H data
	Step	Action
	1	Turn "DTD" on.
	2	Select "RADIO" and press enter.
	3	Select "SEND" and press enter.
	4	Select "RADIO" and press enter.
	5	Select "ICOM" and press enter.
	6	Connect DTD to RT-1523 "AUDIO/FILL" connector.
	7	Arrow down twice.
	8	Do not include time. Select "NO" and press enter.
	9	Press "LOAD" on RT.
	10	"LOAD" will appear in LED and a series of beeps will be heard in
		the handset.
	11	Observe the "FH DATA" being loaded.
	12	Once all data has been transferred, DTD will read "ICOM
		TRANSFER SUCCESSFUL" and RT LED will display "DONE."

# Annex C: SINCGARS (RT-1523E/F) Operations (continued)

2 (cont)	Load F	H data (continued)
	Step	Action
	13	Arrow down as indicated and turn DTD off.
	14	Set "FCTN" to SQ ON/SQ OFF as desired.
	15	Set "CHAN" to desired channel and load time.
	Manua	Ily Loading Time in the RT-1523E/F
STEP	ACTIO	N
1	Set "FC	CTN" to LD.
2	Press t	ne MENU key until SC, FH, or FHM appears Set to FH by pressing
	the #7 (	CHG button. NOTE: Channel selection doesn't matter because the
	time yo	u load will automatically go to all channels.
3	Press "	TIME" on the keypad; 00 will appear on the left side of the LED
4	Press "	CLR" on the keypad; two lines will replace the 00.
5	Enter th	ne last two digits of the Julian date and press "STO" on the keypad.
6	Press ti	me again and 00 00 will appear.
7	Press "	CLR" and the 00 00 will be replaced by four lines.
8	Enter "Z	ZULU/GMT" time and press "STO"; if 30 seconds have elapsed
	betwee	n any of these steps, the RT will time out and you will have to start
	over at	Step 3.
9	Set "FC	CTN" to SQ ON/SQ OFF as desired and attempt to communicate.
	Loadin	g Time in the RT-1523 with the PSN-13 (DAGR)
STEP	ACTIO	Ν
1	Prep th	e radio
	Step	Action
	1	Set "FCTN" to LD.
	2	"CHAN," "MODE," and "COMSEC" selection does not apply.
2	On the	DAGR
	Step	Action
	1	Turn the PSN-13 on
	2	Navigate to the PPS/HQ/SINCGARS page
	3	Press ENTER and navigate to the desired fields
	4	Press ENTER again on the desired field and ensure COM1/2 is
		displayed in the appropriate boxes
	5	Connect the PSN-13 to the radio's fill port
	6	Press the menu button and a box will appear that says
		"ACTIVATE SINCGARS"
	7	Press the enter key and follow the directions
		*SEE STUDENT HANDOUT Pages 41-48*

# Annex C: SINCGARS (RT-1523E/F) Operations (continued)

	Changing the NET ID
STEP	ACTION
1	Set "FCTN" to LD.
2	Set "MODE" to FH(M).
3	Set "CHAN" to the channel that contains the Net ID being changed.
4	Press "FREQ" then "CLR" on the keypad. F will show in RT LED.
5	At this time, press any 3 numbers that you want to be the new Net ID.
6	Press "STO" and the new Net ID should appear in the LED.
	Basic Trouble Shooting for the RT-1523
STEP	ACTION
1	Is it on?
2	Is the volume up turned up?
3	Right Net ID or frequency?
4	Right crypto? (Are all channels loaded with the same crypto? If not, try
	scrolling COMSEC.)
5	Do you have the right time loaded?
6	Check connectors (handset and antenna, pm).
7	Check batteries (main battery and fill battery).
8	If all of the above is good and you cannot seem to talk, go to STBY then back to ON.

# Annex D: AN/PSN-13 (DAGR) Operations

	Finding current position with the AN/PSN-13 DAGR
STEP	ACTION
1	Turn on the DAGR.
2	Satellite Vehicle (SV) Sky View Page Displayed
3	Initially Acquiring SV (Automitc)
4	Tracking SV (Automatic)
	Present Position Page (Automatic after satellites are aquired)
	Press the down arrow key and time will be displayed
5	Press ENTER and move the black window over the time and press ENTER
6	This window is where you adjust the UTC offset to get local time (GMT-5 or-
	4) and ZULU time Press enter on desired time zone
7	Now press the menu button twice and scroll down to communications
8	Press ENTER on Communications
9	Scroll down to PPS, HQ, SINCGARS
10	A screen is displayed with the status of the ports on the back of the DAGR
11	If the windows do not say 1-PPS UTC in the COM1&3 press ENTER
12	Scroll down to COM1 and press ENTER
13	Select 1-PPS UTC for both windows
14	Press MENU
15	Connect the DAGR to the RADIO
16	Select SINCGARS and then press LOAD or ENTER on the RT

# Annex E: AN/PRC-148 Operations

	Loadir	ng a Single Channel Frequency into an AN/PRC-148		
STEP	ACTIO	ACTION		
1	Press /	Press ALT and MODE simultaneously.		
2	Press	Press ENT on PROGRAM.		
3	Press	Press ENT on RADIO CONFIGURATION.		
4	Select	desired channel.		
5	Arrow	down to the word BASIC and press ENT. It will then be highlighted.		
6	Arrow	up one time to the word SINCGAR and press ENT.		
7	Select	the desired SINCGAR channel followed.		
8	Assure	that the ECCM is set to SC and press ENT.		
9	Press	ENT on the letters FX. The default frequency will be highlighted. In		
	order t	o move to the left or the right use the up and down arrows plus the ALT		
	key to	get to desired positions on the frequency. Press ENT when you have		
	comple	eted inserting the frequency you desired.		
10	Arrow	down to the next menu screen in order to get to the OFFSET option.		
	Press	ENT then arrow up or down to highlight the desired OFFSET option.		
	Loadir	ng COMSEC in the AN/PRC-148 Using the DTD		
STEP	ACTIO	ACTION		
1	Prep t	he radio		
	Step	Action		
	1	Press ALT and MODE simultaneously.		
	2	Arrow up to the KEY FILL option and press ENT.		
	3	Press ENT on COMSEC.		
	4	Select which key position you desire to load it in, i.e., TEK 1,2,3,4,5,		
		or KEK. Press ENT on key and arrow either up or down to desired		
		position.		
2	Load (	COMSEC		
	Step	Action		
	1	Turn "DTD" on.		
	2	Select "RADIO" and press enter.		
	3	Select "COMSEC" and press enter.		
	4	Select "LD" and press enter.		
	5	Select "TEK" and press enter.		
	6	Select desired segment by paging up or down and press enter at		
		desired segment.		
	7	"XMIT" will show on the screen to the right of the segment.		
	8	Arrow over to "QUIT" and press enter.		
	9	Connect DTD to an/prc-148.		
	10	DTD will display "SENDING TEK."		
	11	DTD will display "PRESS LOAD ON RT."		
	12	Press the PTT button.		
	13	Repeat steps as required.		

# Annex E: AN/PRC-148 Operations (Continued)

	Loadir	ng FH Data in the AN/PRC-148	
STEP	ACTION		
1	Prep tl	he radio	
	Step	Action	
	1	Press ALT and MODE simultaneously.	
	2	Arrow up to the KEY FILL option and press ENT.	
	3	Press ENT on the MODE 2/3 option.	
2	Load F	FH Data	
	Step	Action	
	1	Turn "DTD" on.	
	2	Select "RADIO" and press enter.	
	3	Select "SEND" and press enter.	
	4	Select "RADIO" and press enter.	
	5	Select "ICOM" and press enter.	
	6	Connect DTD to AN/PRC-148 "AUDIO/FILL" connector.	
	7	Arrow down twice.	
	8	Press PTT on the AN/PRC-148 prior to Y/N on include time.	
	9	Observe the "FH DATA" being loaded.	
	10	Once all data has been transferred, DTD will read "ICOM	
		TRANSFER SUCCESSFUL."	
	11	Arrow down as indicated and turn DTD off.	
	Manua	Illy Loading Time in the AN/PRC-148	
STEP	ACTIO	N	
1	Press /	ALT and MODE simultaneously.	
2	Press I	ENT on PROGRAM.	
3	Arrow u	up to GLOBAL and press ENT.	
4	Arrow	up to SET CLOCK and press ENT.	
5	Insert t	he last two days of the current Julian Date and press ENT.	
6	Insert t	he current ZULU hours and press ENT.	
7	Insert t	he minutes that you are going to roll to wait for the countdown and	
	press E	ENT to start the seconds.	
	Loadir	ng a UFH frequency into the AN/PRC-148	
STEP	ACTIO	N	
1	Press /	ALT and MODE simultaneously.	
2	Press I	ENT on PROGRAM.	
3	Press I	ENT on RADIO CONFIGURATION.	
4	Select	desired channel.	
5	Arrow	down and assure that the word Basic is at the bottom of the screen	
	undern	eath of the word power.	
6	Arrow	down and press ENT on FX then enter desired frequencies. Use the	
	up and	down arrows plus the alt key to move to the left or right.	
7	Ensure	e that the Modulation is correct (AM/FM).	

## Annex F: AN/PRC-117 (RT-1796) Operations

	Line of Sight Operations for the AN/PRC-117
STEP	ACTION
1	Turn radio to the CT position.
2	Press the 8 button which is the program button.
3	Press ENT on NORM.
4	Press ENT on NET.
5	Select a net to modify00 to 99 then press ENT.
	NOTE: You or the NCS choose which net.
6	Activate in list YES press ENT.
7	Net type LOS FIX FREQUENCY press ENT.
8	Press ENT on FREQ.
9	Enter receive frequency press ENT.
10	Enter transmit frequency press ENT.
11	Receive only NO press ENT.
12	ARROW OVER to COMSEC then press ENT.
13	Crypto mode VINSON press ENT.
14	Encryption key TEK 21 press ENT.
15	Analog data NO press ENT.
16	ARROW OVER to POWER press ENT.
17	Power level 10 WATTS press ENT.
18	ARROW OVER to NAME press ENT.
19	Enter net using the key pad press ENT.
20	Scroll to the DAT/VOC field and press enter until you see modulation.
21	Set the modulation to AM press ENT until the main menu comes back up.
22	Clear out to the main screen and scroll to the net you just programmed.
23	Get a radio check.
	SATCOM Operations for the AN/PRC-117
STEP	ACTION
1	Press 8 or program on the CIK.
2	Press ENT on NORM.
3	Press ENT on NET.
4	Select net to modify 00 to 99 press ENT.
5	Active in list YES press ENT.
6	NET TYPE SATCOM press ENT.
7	Press ENT on FREQ.
8	Enter frequency code (001-239) or 999 for manual entry for receive and
	transmit freqs press ENT.
9	Check receive freq press ENT.
10	Check transmit freq press ENT.

## Annex F: AN/PRC-117 (RT-1796) Operations (Continued)

	SATCO	OM Operations for the AN/PRC-117 (Continued)		
STEP	ACTIO	Ν		
11	Receiv	Receive only NO press ENT.		
12	ARROW OVER to COMSEC press ENT.			
13	Crypto	Crypto mode VINSON for 25Khz or ANDVT for 5Khz press ENT.		
14	TEK 2	1 for VINSON or TEK 01 for ANDVT press ENT.		
15	Analog	data NO press ENT.		
16	ARRO	W OVER to DATA/VOC press ENT.		
17	Select	data or voice ADF PORT VOICE DATA PORT press ENT.		
18	Select	SYNC or ASYNC (SYNC is VOICE, ASYNC is DATA) press ENT.		
19	ARRO	W OVER to SQUELCH then press ENT.		
20	Digital	squelch ON/OFF press ENT. (Digital squelch has to be on for 25Khz)		
21	ARRO	W OVER to POWER press ENT.		
22	20 WA	TTS press ENT.		
23	ARRO	W OVER to NAME press ENT.		
24	Enter i	n a net name using the key pad press ENT.		
25	Press (	CLR 4 times.		
26	Scroll t	o the NET you just programmed and Press the 1 (CALL) button		
27	Press	ENTER and you will receive a score that has to be consistently 80 or		
	higher.	If it is not check your azimuth and elevation.		
	Loadir	ng COMSEC/HOPSET in the AN/PRC-117 using the DTD		
STEP	ACTION			
1	Prep t	he radio		
	Step	Action		
	1	Set "FCTN" to LD.		
	2	Arrow down to CYZ-RDS		
	3	Press ENT prior to Y/N to include time on the DTD		
2	Load (	COMSEC		
	Step	Action		
	1	Turn "DTD" on.		
	2	Press ENT on APPL.		
	3	Select "RADIO" and press enter.		
	4	Press ENT on SEND. Then send to: RADIO.		
	5	Press ENT on ICOM.		
	6	Then follow directions on AN/CYZ-10. Do not include time from		
		CYZ-10.		
	7	Press YES for more fill data on the CYZ-10.		
	8	Press CLR to back to fill device and ARROW DOWN to KYK-13		
		and press ENT.		
	9	For fill type ARROW DOWN to VINSON and press ENT.		
	10	Press ENT on TEK and on 01. STOP THERE AND GO BACK TO		
		YOUR CYZ-10.		

# Annex F: AN/PRCC-117 (RT-1796) Operations (Continued)

	Loadin	ng COMSEC (continued)
	Step	Action
	11	Press MAIN MENU on your CYZ-10.
	12	Press ENT on APPL .
	13	Press ENT on RADIO.
	14	Press ARROW OVER and DOWN to COMSEC press ENT.
	15	Scroll to LD press ENT then press ENT on select TEK.
	16	Use PGDN on the DTD. Once you are on the correct screen press
		ENT on the HF/ANDVT, then arrow over to quit. Follow the
		instructions from the DTD.
	17	Once the RT-1796 is filled press ENT and NO for more fill data.
	18	Turn your function knob to CT.
	Loadin	ig FH Data in the AN/PRC-117 via the DTD
STEP	ACTIO	Ν
1	Press 8	3 or Program on the key pad.
2	Press E	ENT on NORM.
3	ARRO	W OVER to GENERAL and press ENT.
4	Hoppin	g type SINCGARS and press ENT.
5	Press E	ENT on CONFIG.
6	Active	cue freq YES, then press ENT.
7	Enter in	n your cue freq press ENT.
8	SINCG	ARS radio type MEMBER/MASTER press ENT.
9	ARRO	W OVER to HOPSET COPY press ENT.
10	Copy fi	rom 25 and copy to the current hopset compartment you have
	associa	ated the net with (i.e. NET2 should be associated with compartment2).
11	Enter in	n the NET ID press ENT.
12	Press (	CLR once and ARROW OVER to NET press ENT.
13	Select	net to modify 00-25 press ENT.
14	Activat	e in list YES press ENT.
15	Net typ	e FREQUENCY HOPPING press ENT.
16	Hoppin	ig type SINCGARS press ENT.
17	HOPSE	ET press ENT.
18	HOPSE	ET COMPARTMENT
	NOTE.	Same compartment from Step 10.
19	Late ne	et entry ON press ENT.
20	Receiv	e only NO press ENT.
21	ARRO	W OVER to COMSEC press ENT.
22	Crypto	Mode ARROW DOWN to VINSON press ENT.
23	ENCR	YPTION KEY select where you put the fill TEK 21 press ENT.
24	ANALC	DG DATA NO press ENT.
25	ARRO	N OVER to DATA/VOC

# Annex F: AN/PRCC-117 (RT-1796) Operations (Continued)

	Loading FH Data in the AN/PRC-117 via the DTD (continued)
STEP	ACTION
26	Select data or voice (ADF PORT FOR VOICE DATA PORT FOR DATA)
	press ENT.
27	SYNC ASYNC select (SYNC IS VOICE ASYNC IS DATA) press ENT.
28	Select your BAUD RATE press ENT.
29	ARROW OVER to POWER press ENT.
30	TX POWER LEVEL 10 WATTS press ENT.
31	ARROW OVER to NAME press ENT.
32	Name using the key pad then press ENT.
33	Press CLR 4 times.
34	Ensure your radio is on the right NET press 7 or option.
35	ARROW OVER time press ENT.
36	Press ENT on GTOD
37	Enter in the last two of the Julian Date. Enter in military time according to
	ZULU HRS press ENT on time hack. (PSN-13)
38	Press CLR twice then press 0 to check your time against the PSN-13.
39	GET A RADIO CHECK.
	Basic Troubleshooting for the AN/PRC-117
STEP	ACTION
1	Is it on?
2	Is the volume up turned up?
3	Right Net ID or frequency?
1	Right crypto? (Are all channels loaded with the same crypto? If not, try
4	scrolling COMSEC.)
5	Do you have the right time loaded?
6	Check connectors (handset and antenna, pm).
7	Check batteries (main battery and HUB battery).

# Annex G: AN/PRC-150 (RT-1694) Operations

	Loading COMSEC into the AN/PRC-150 with AN/CYZ-10						
STEP	ACTION						
1	Press ON/OFF on the AN/CYZ-10						
2	Press MAIN MENU if not already there.						
3	Press LETTER LOCK TO OFF						
4	Press ENTER ON APPL						
5	Scroll to RADIO press ENTER						
6	Scroll to COMSEC press ENTER						
7	Scroll to LD press ENTER						
8	ENTER ON TEK						
9	PGDN and press ENTER on KEY TO USE						
10	XMT should show next to Key and press ENTER on QUIT						
11	Connect ANCD to RT (STOP HERE) program the RT-1694						
12	On RT-1694 Scroll to LD						
13	FILL DEVICE: Scroll UP/DOWN to KYK-13 press ENTER						
14	CRYPTO TYPE: ANDVT or KG 84						
15	KEY TYPE: TEK, KEY NUMBER: 01 PRESS ENTER						
16	NOW ON CYZ-10 PRESS ENTER ON CONNECT TO ANCD TO RT						
17	WAIT FOR IT TO SAY PRESS LOAD ON RT						
18	PRESS ENTER TO INITIATE FILL						
19	FILL DONE PRESS ENT						
21	MORE FILL DATA (NO)						
22	Move switch out of LD position						
	Programming Fixed Frequency Channel in the AN/PRC-150						
STEP	ACTION						
1	Press the 8 (PGM) button						
2	Scroll to MODE press ENTER						
3	Press ENTER on PRESET						
4	Press ENTER on Channel						
5	Select channel number to change (001) MULTIPLE CHANNELS FOR ALE						
6	Enter RX frequency (1.6-59.9999Mhz)						
7	Enter TX frequency (1.6-59.9999Mhz)						
8	MODULATION USB						
9	AGC SPEED (MED)						
10	BANDWIDTH (3.0 KHZ)						
11	RX ONLY (NO)						
12	LIMIT MAX TRANSMIT POWER (NO)						
13	ENABLE SSB SCAN (NO)						
14	Press CLR 4 times to return to main screen						
15	RIGHT ARROW TO KEY						
16	Scroll UP/DOWN until it says TEK 01 ANDVT HF/BD or KG 84						
17	CHANGE CRYPTO MODE (YES)						

# Annex G: AN/PRC-150 (RT-1694) Operations (Continued)

	Programming Channel for HF communications in the AN/PRC-150						
	(Continued)						
STEP	ACTION						
18	Main screen should appear again in CT ANDVT-HF/BD or KG 84						
19	RIGHT ARROW TO CHANNEL						
20	Scroll UP/DOWN to select channel *						
	Programming Automatic Link Establishment (ALE)						
STEP	ACTION						
1	HIT 8 (PGM)						
2	Scroll to MODE press ENTER						
3	Scroll to ALE press ENTER						
4	Press ENTER on CHANNEL GROUP						
5	ENTER on ADD						
6	Select a GROUP # EX: 01 press ENTER						
7	ENTER on ADD						
8	Select Channel # EX: 1,2,3,4,5. Enter a total of 5 channels						
9	CLR 3 TIMES						
10	Scroll to ADDRESS						
11	ADDRESS TYPE (SELF)						
12	Enter on ADD						
13	Name your Address 1-3 Characters EX: 001, TBS, ACO, BCO						
14	Press ENTER to save						
15	Add to Channel Group EX: 01 PRESS ENTER						
16	ADDRESS TYPE (INDIVIDUAL)						
17	ENTER on ADD						
18	NAME INDIVIDUAL ADDRESSES (not yours) EX: TBS, ACO, BCO						
19	ADD TO CHANNEL GROUP EX: 01						
20	ASSOC SELF (SHOULD BE YOUR SELF ADDRESS) EX: 001						
21	ADDRESS TYPE (NET)						
22	ENTER on ADD						
23	Name your Net EX: TAC, BNC, 1MD, 2MD, ALE (1-3 Characters)						
24	CHANNEL GROUP EX: 01						
25	ASSOC SELF (YOUR SELF ADDRESS) EX: 001, TBS, ACO						
26	Scroll UP/DOWN to review press ENTER						
27	Scroll UP/DOWN to ensure that both SELF ADDRESS and INDIVIDUAL						
21	ADDRESS are both NET MEMBERS.						
28	Hit CLR until you are back to the ADDRESS MENU						
29	Scroll to CONFIG press ENTER						
20	MAX SCAN CHANNELS ( THE NUMBER OF CHANNELS IN GROUP)						
30	EX: 5						
31	LISTEN BEFORE TRANSMIT (OFF)						
32	KEY TO CALL (ON)						
33	MAX TUNE TIME 3 SECS						

	Automatic Link Establishment (ALE) (continued)
STEP	ACTION
34	LINK TIMEOUT (OFF)
35	LINK TO ANY CALLS (OFF)
36	AMD OPERATION ENABLED
37	AMD AUTO DISPLAY ON
38	SCAN RATE (2)
39	LINK PROTECTION LEVEL 0
40	LINK PROTECTION KEY (000000000000000)
41	Pres CLR until you see the ALE screen
42	Scroll to MODEM and press ENT
43	Change the modem name to SER24
44	Press ENT until you see mode
45	Scroll to System and press ENT
46	Press ENT until you see RADIO NAME
47	Arrow up until you see ALE press ENT
48	Arrow up until you see your SELF ADDRESS press ENT
49	Arrow up until you see SER24 press ENT
50	Arrow up until you see TYPE1 press ENT
51	Arrow up until you see ANDVT BD
52	Press ENT until you see the MODE screen
53	Press 8 PRG button and the main screen will be displayed
54	Press 3(MODE) until it says ALE press ENTER
55	RIGHT ARROW TO KEY
56	Scroll UP/DOWN until it says TEK 01 ANDVT HF/BD or KG 84
57	CHANGE CRYPTO MODE (YES)
58	Main screen should appear again in CT ANDVT-HF/BD or KG 84
59	Press CLR to begin scanning
60	Key out on handset to link frequencies

**NOTE:** Different Crypto types offer different Modem types. The instructions above, references setting up an ALE network with an ANDVT/BD crypto and a Serial Modem.

# Annex H: AN/PRC-152 (RT-1619) Operations

	Loading AN/PRC-152 with a single channel (VULOS) frequency
STEP	ACTION
1	RT can either be on PT or CT to program but CANNOT be on LD
2	Once at main screen select PGM, ENTER
3	Scroll to VULOS CONFIG, ENTER
4	Scroll to VINSON COMPATIBILITY, ENTER
5	Set to VINSON COMPATIBILITY ON, ENTER
6	CLR back to PGM menu, scroll to SYSTEM PRESETS, ENTER
7	Got to SYSTEM PRESET CONFIG, ENTER
8	SYSTEM PRESET NUMBER (enter channel number you want to config), ENTER
9	PRESET DESCRIPTION (this is a description of this net). It is NOT
10	PRESET WAVEFORM (select appropriate waveform ie: VULOS, HAVEQUICK, HPW). Select VULOS, ENTER
11	Next programming menu for that specific net will appear, select GENERAL CONFIG, ENTER
12	PRESET NAME (program appropriate channel name), ENTER
13	PRESET TYPE, select LOS, ENTER
14	Next RT will take you back to PRESET CONFIG menu, a checkmark will appear next to GENERAL CONFIG telling you that this portion of programming is done. Highlight FREQUENCY, ENTER
15	Input RCV FREQ, ENTER
16	RECEIVE ONLY, NO, ENTER
17	TRANSMIT FREQ, use RECEIVE FREQ, ENTER. RT will show TRANS FREQ, hit ENTER
18	RT goes back to PRESET CONFIG menu with a check next to FREQUENCY stating it has been programmed
19	Select COMSEC, ENTER
20	RT will ask for COMSEC mode, select VINSON, ENTER
21	RT will ask for CRYPTO key, select appropriate THE, ENTER
22	RT goes back to PRESET CONFIG menu with checkmark next to COMSEC
23	Scroll to TRAFFIC, ENTER
24	TRAFFIC MODE VX or DATA, ENTER
25	Next RT will scroll through defaults given by TRAFFIC MODE and Frequency Range selected, ENTER through to PRESET CONFIG menu and checkmark will appear next to TRAFFIC
26	Select TX PWR, ENTER. Select desired PWR level, ENTER. RT goes back to PRESET CONFIG MENU
27	Scroll through SQUELCH, make changes if desired other than default and hit EXIT

# Annex H: AN/PRC-152 (RT-1619) Operations (Continued)

	Loading AN/PRC-152 COMSEC							
STEP	ACTIO	Ν						
1	Prep tl	he Radio						
	Step	Action						
	1	PWR on RT by turning large knob to FP (System will run self test)						
	2	Once at main screen, looking down from top of RT change from PT						
		to LD						
	3	Radio will change to FILL menu						
	4	Under fill menu, select FILL, ENTER						
	5	Select waveform for Single Channel CT, select VULOS, ENTER						
	6	Select FILL device, KYK 13, ENTER						
	7	Go to Step 2 Load COMSEC						
	8	Press ENTER to initiate fill						
	9	Once key has transferred RT will ask what CRYPTO mode, select VINSON, ENTER						
	10	Key type, select TEK and set key number, ENTER						
	11	RT will ask for classification of key. Select what classification the						
		key is, ENTER						
	12	RT will say completing fill and will then ask you if you need to LD						
		another key. If yes it will kick you back to step 5. If no, RT will kick						
		you back to FILL menu. From there roll small knob to CT (These						
		steps apply to all Single Channel Programming IE: VHF, UHF,						
		SATCOM VX and DATA) Available selections for waveform are						
		SINCGARS for FREQ HOPPING, VULOS for VHF and UHF LOS						
		and HPW for SATCOM DATA						
2	Load C	OMSEC						
	Step	Action						
	1	Turn "DTD" on.						
	2	Select "RADIO" and press enter.						
	3	Select "COMSEC" and press enter.						
	4	Select "LD" and press enter.						
5	Select	desired segment by paging up or down and press enter at desired						
	segme	nt.						
6	"XMIT"	will show on the screen to the right of the segment.						
7	Arrow	over to "QUIT" and press enter.						
8	Conne	ct DTD to RT-1619 and arrow down.						
9	DTD w	ill display "SENDING TEK."						
10	DTD w	ill display "PRESS LOAD ON RT."						
11	Go to s	step 8 of radio setup						
	Loadir	ng COMSEC/HOPSET in the AN/PRC-152 using the DTD						
STEP	ACTIO	N						
1	Set RT	knobs to FP and FILL						
2	Highlig	ht FILL, ENTER						
3	Scroll to SINCGARS, ENTER							

# Annex H: AN/PRC-152 (RT-1619) Operations (Continued)

	Loading COMSEC/HOPSET in the AN/PRC-152 using the DTD (CONT)
4	Select DTD / KYK 20, ENTER
	Fill port type MODE 2/3, (AT THIS TIME, MAKE SURE CYZ 10 IS AT
5	INCLUDE TIME YES/NO OR OPERATION WILL NOT WORK FOR
	UPLOADING COMSEC INTO RT)
6	Press ENTER on RT and then press ENTER on CYZ 10. RT will
	automatically begin to upload Loadset
_	Once completed, ENTER classification of loadset. RT will then ask you if
7	you want to fill another key.
	(NOTE) SINCGARS time hack will be set during NET ID configuration
8	Set RT smaller knob to CT and configure NET ID's
0755	
SIEP	
1	Turn "DTD" on.
2	Press ENT on APPL.
3	Select RADIO and press enter.
4	Press ENT on SEND. Then send to: RADIO.
5	Press ENT on ICOM.
6	Then follow directions on AN/CY2-10. Do not include time from CY2-10.
отгр	ACTION
J	ACTION Dreagramming is as follows accuming ICOM was already leaded into PT
2	Incure PT is on in either PT or CT. PT also has to be on EP
2	From main scroon, soloct PROGRAM, ENTER
3	Scroll to SINCGARS CONFIG ENTER
5	Scroll to HOPSET/LOCKOLIT_ENTER
6	Select COPY HOPSETS ENTER
7	COPY HOPSET from 01 ENT
8	COPY HOPSET to 01 ENTER NEW HOPSET ID will show on RT
Ũ	Program appropriate NET ID and hit ENTER
9	RT then goes to SINCGARS HOPSET LOCKOUT menu. Repeat all steps
0	for additional NET ID's just remember to program NET ID's sequentially.
	You can program 25 NET ID's on PRC 152. Net ID's can be programmed
	in any of the available channel spaces on RT
10	Once all HOPSET COPIES and NET ID's have been programmed CLR out
	to main menu
11	Select PROGRAMMING MENU, ENTER
12	Select SYSTEM PRESET CONFIG, ENTER
13	Select appropriate NET for NET ID, ENTER
14	PRESET DESCRIPTION (leave as default), ENTER
15	PERSET WAVEFORM, select SINCGARS, ENTER
16	OP MODE, select FREQUENCY HOPPING, ENTER
17	PRESET NAME (type in channel name), ENTER
18	CRYPTO TEK 01, ENTER (TEK 01 WILL WORK for all NET ID's)

# Annex H: AN/PRC-152 (RT-1619) Operations (Continued)

	Programming Frequency Hopping for the RT1619 (CONTINUED)
19	TX PWR LEVEL, default is HIGH, ENTER
20	TRAFFIC MODE, VOICE, ENTER
21	SELECT HOPSET COMPARTMENT (select appropriate NET ID for net
	being programmed), ENTER
22	SINGLE CHANNEL FREQUENCY (leave as DEFAULT), ENTER
23	SINGLE CHANNEL SQUELCH TYPE (leave as DEFAULT), ENTER
24	Repeat steps for follow on NET ID's
	Programming Frequency Hopping Time for RT1619
	r regrammig r requency repping rime for Kr refe
STEP	ACTION
STEP	ACTION Make sure RT is in main screen AND ALSO MAKE SURE MAIN SCREEN
<b>STEP</b> 1	ACTION Make sure RT is in main screen AND ALSO MAKE SURE MAIN SCREEN IS ON ANY SINCGARS NET
<b>STEP</b> 1 2	ACTION Make sure RT is in main screen AND ALSO MAKE SURE MAIN SCREEN IS ON ANY SINCGARS NET Enter on OPTIONS
<b>STEP</b> 1 2 3	ACTION Make sure RT is in main screen AND ALSO MAKE SURE MAIN SCREEN IS ON ANY SINCGARS NET Enter on OPTIONS Select SINCGARS OPTIONS, ENTER
<b>STEP</b> 1 2 3 4	ACTION Make sure RT is in main screen AND ALSO MAKE SURE MAIN SCREEN IS ON ANY SINCGARS NET Enter on OPTIONS Select SINCGARS OPTIONS, ENTER Select SINCGARS GTOD, ENTER
<b>STEP</b> 1 2 3 4 5	ACTION Make sure RT is in main screen AND ALSO MAKE SURE MAIN SCREEN IS ON ANY SINCGARS NET Enter on OPTIONS Select SINCGARS OPTIONS, ENTER Select SINCGARS GTOD, ENTER Select USER ENTRY, ENTER
<b>STEP</b> 1 2 3 4 5 6	ACTION Make sure RT is in main screen AND ALSO MAKE SURE MAIN SCREEN IS ON ANY SINCGARS NET Enter on OPTIONS Select SINCGARS OPTIONS, ENTER Select SINCGARS GTOD, ENTER Select USER ENTRY, ENTER Input appropriate time and day, ENTER

#### Annex I: AN/PRC-153 Operations

	To select a zone through the preprogrammed zone switch								
STEP	ACTION								
1	Turn the zone switch to select the desired zone. If the zone you selected								
1	unprogrammed, repeat step one and select a different zone.								
2	Press home button (house icon on left of RT) to begin transmitting on the								
2	displayed zone/channel.								
	To select a zone through the menu								
STEP	ACTION								
1	Press the right side of the 4-way (center 4 arrow button) navigation button until zone soft key appears on the display.								
	Press the menu select button below the zone soft key. (The display shows								
2	the zone name blinking while the channel name remains the same).								
	Press the right side of the 4-way nav button to find the desired zone name								
3	OR use The keypad to enter the zone name. If the zone you selected is								
	unprogrammed, repeat step three and select a different zone.								
4	Press the home button to select the displayed zone/channel.								
	To select a channel through the preprogrammed channel selector								
STEP	ACTION								
1	Select the desired zone.								
	Turn the preprogrammed channel selector until you see the desired channel								
2	displayed. The new name appears on the display. If the channel/mode you								
	selected is not programmed, repeat the steps above.								
	To select a channel through the menu								
STEP	ACTION								
1	Select the desired zone.								
2	Press the right side of the 4-way nav button until the CHAN soft key								
	appears on the display.								
3	Press menu select button below the CHAN soft key. The display shows the								
	channel name blinking while the zone name remains the same.								
4	Press the right side of the 4-way hav button to find the desired channel or								
4	use the key pad to enter the channel number. If the channel you selected is								
	Unprogrammed, repeat step rour.								
5	riess the nome button to select the displayed zone/channel or press the								
0	DTT button to transmit on the diaployed zene/shannel								

Note: While at the basic school you're AN/PRC-153, XTS2500, and XTS5000 will remain on "C" or no fill position.

## Annex J: Julian Date Calendar

Day	Jan	Feb	Mar	Apr	May	June	July	Aug	Sept	Oct	Nov	Dec	Day
1	001	032	060	091	121	152	182	213	244	274	305	335	1
2	002	033	061	092	122	153	183	214	245	275	306	336	2
3	003	034	062	093	123	154	184	215	246	276	307	337	3
4	004	035	063	094	124	155	185	216	247	277	308	338	4
5	005	036	064	095	125	156	186	217	248	278	309	339	5
6	006	037	065	096	126	157	187	218	249	279	310	340	6
7	007	038	066	097	127	158	188	219	250	280	311	341	7
8	800	039	067	098	128	159	189	220	251	281	312	342	8
9	009	040	068	099	129	160	190	221	252	282	313	343	9
10	010	041	069	100	130	161	191	222	253	283	314	344	10
11	011	042	070	101	131	162	192	223	254	284	315	345	11
12	012	043	071	102	132	163	193	224	255	285	316	346	12
13	013	044	072	103	133	164	194	225	256	286	317	347	13
14	014	045	073	104	134	165	195	226	257	287	318	348	14
15	015	046	074	105	135	166	196	227	258	288	319	349	15
16	016	047	075	106	136	167	197	228	259	289	320	350	16
17	017	048	076	107	137	168	198	229	260	290	321	351	17
18	018	049	077	108	138	169	199	230	261	291	322	352	18
19	019	050	078	109	139	170	200	231	262	292	323	353	19
20	020	051	079	110	140	171	201	232	263	293	324	354	20
21	021	052	080	111	141	172	202	233	264	294	325	355	21
22	022	053	081	112	142	173	203	234	265	295	326	356	22
23	023	054	082	113	143	174	204	235	266	296	327	357	23
24	024	055	083	114	144	175	205	236	267	297	328	358	24
25	025	056	084	115	145	176	206	237	268	298	329	359	25
26	026	057	085	116	146	177	207	238	269	299	330	360	26
27	027	058	086	117	147	178	208	239	270	300	331	361	27
28	028	059	087	118	148	179	209	240	271	301	332	362	28
29	029		088	119	149	180	210	241	272	302	333	363	29
30	030		089	120	150	181	211	242	273	303	334	364	30
31	031		090		151		212	243		304		365	31

## Annex J: Julian Date Calendar (continued)

## JULIAN DATE CALENDAR (FOR LEAP YEARS ONLY)

Day	Jan	Feb	Mar	Apr	May	June	July	Aug	Sept	Oct	Nov	Dec	Day
1	001	032	061	092	122	153	183	214	245	275	306	336	1
2	002	033	062	093	123	154	184	215	246	276	307	337	2
3	003	034	063	094	124	155	185	216	247	277	308	338	3
4	004	035	064	095	125	156	186	217	248	278	309	339	4
5	005	036	065	096	126	157	187	218	249	279	310	340	5
6	006	037	066	097	127	158	188	219	250	280	311	341	6
7	007	038	067	098	128	159	189	220	251	281	312	342	7
8	008	039	068	099	129	160	190	221	252	282	313	343	8
9	009	040	069	100	130	161	191	222	253	283	314	344	9
10	010	041	070	101	131	162	192	223	254	284	315	345	10
11	011	042	071	102	132	163	193	224	255	285	316	346	11
12	012	043	072	103	133	164	194	225	256	286	317	347	12
13	013	044	073	104	134	165	195	226	257	287	318	348	13
14	014	045	074	105	135	166	196	227	258	288	319	349	14
15	015	046	075	106	136	167	197	228	259	289	320	350	15
16	016	047	076	107	137	168	198	229	260	290	321	351	16
17	017	048	077	108	138	169	199	230	261	291	322	352	17
18	018	049	078	109	139	170	200	231	262	292	323	353	18
19	019	050	079	110	140	171	201	232	263	293	324	354	19
20	020	051	080	111	141	172	202	233	264	294	325	355	20
21	021	052	081	112	142	173	203	234	265	295	326	356	21
22	022	053	082	113	143	174	204	235	266	296	327	357	22
23	023	054	083	114	144	175	205	236	267	297	328	358	23
24	024	055	084	115	145	176	206	237	268	298	329	359	24
25	025	056	085	116	146	177	207	238	269	299	330	360	25
26	026	057	086	117	147	178	208	239	270	300	331	361	26
27	027	058	087	118	148	179	209	240	271	301	332	362	27
28	028	059	088	119	149	180	210	241	272	302	333	363	28
29	029	060	089	120	150	181	211	242	273	303	334	364	29
30	030		090	121	151	182	212	243	274	304	335	365	30
31	031		091		152		213	244		305		366	31

#### References

Reference Number or Author	Reference Title
FM 24-18	Tactical Single-Channel Radio Communications
	Techniques
TM 11-5805-210-12	Telephone Sets TA 312/PT and TA-312A
TM 11-5808-243-13-40	Operator's Manual for the TA-1/PT
TM 11-5820-890-10-1	Radio Set, AN/PRC-119
TM 11-5820-890-10-6	SINCGARS ICOM Ground Radio Pocket Guide
MCRP 3-11.1A	Commander's Tactical Handbook
MCRP 3-40.3A	Tactical Communications
MCRP 3-40.3B	Radio Operator's Handbook
MCWP 3-11.1	Marine Rifle Company/Platoon
MCWP 3-40.3	Communications and Information Systems

# **Glossary of Terms and Acronyms**

Term or Acronym	Definition or Identification		
ALE	Automatic link establishment		
СОВ	Communications order of battle		
COMSEC	Communications security		
DoD	Department of Defense		
EEFI	Essential elements of friendly information		
EMCOM	Emissions Control		
EOB	Electronic Order of Battle		
EW	Electronic warfare		
FH	Frequency hopping		
GMT	Greenwich mean time		
GPS	Global positioning system		
HF	High frequency		
LOS	Line of sight		
MHz	Megahertz		
MIJI	Meaconing, intrusion, jamming, and interference		
NVIS	Near vertical incident skywave		
SINCGARS	Single channel Ground Air Radio Systems		
UHF	Ultra high frequency		
VHF	Very high frequency		

#### Notes
